

## **Check Kerb Product Data Sheet**

### Sure Edge® Check Kerb Trim

The Sure Edge, Check Kerb Edge increases the installation ease, speed and improves the appearance of your roof edge.

This trim features a compression seal along the underside to create a water tight seal to the roofing membrane. This trim eliminates the need of creating a timber upstand as a water check at the roof perimeter.


Manufactured from co-extruded u-PVC creating a solid foam construction with hard wearing, durable properties. This is the same technology as used in u-PVC fascia manufacture.


#### **Intended Uses**

For creating a water check to flat & low sloping roofs with RubberBond membrane.

#### **Features and Benefits**

- Creates a 20mm upstand at the roof edge
- Smooth, hi-gloss finish easy to keep clean & great looking
- 10mm x 15mm sealing compression foam, factory fitted to the underside of the trim to create a water tight seal to the membrane, over seams and detailing joins.
- Pre drilled fixing holes, for accurate & fast installation
- Complete range of colour matched joints and corner accessories

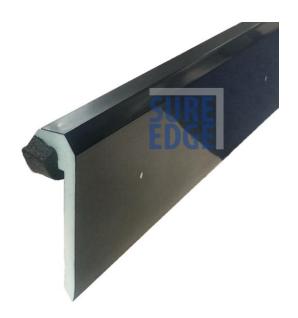

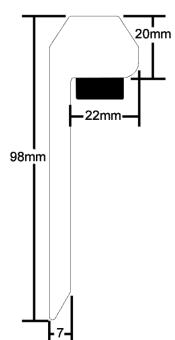

#### Installation

- 1. Before installation of the membrane ensure a solid fixing can be achieved at the perimeter of the roof. A timber fixer can be installed if required.
- 2. Install the membrane to the roof surface as per manufacturers' specifications.





# **Check Kerb Product Data Sheet**

#### Installation cont.

- 3. Ensure the membrane extends down the vertical edge of the roof by a minimum of 50mm
- 4. Position the edge trim onto the roof surface so the sealant foam is compressed by 30% and the face of the trim is in a vertical position.
- 5. Using the 50mm PolyTop nails fix the edge trim into position. A fixing must be in each predrilled hole to achieve correct installation.
- 6. Position the next length of front plate leaving a 1mm expansion gap for each metre of trim used. Ensure that each trim has foam seal extending up the end to create a seal between trim lengths.
- 7. Fit the cover clips at each joint between lengths of trim
- 8. Install corners or stop ends where needed.

Sure Edge – Check Kerb	
Typical Properties & Characteristics*	
Material	Co-extruded u-PVC
Colour	Black or white
Trim Length	2.5m
Additional	Trim Joints, Internal
Components	Corners, External
	Corners

